




Offline Plotting & Analysis

Software Installation and Licensing: Enerplot

Written for Enerplot 1.0.0

December 7, 2020
Revision 2

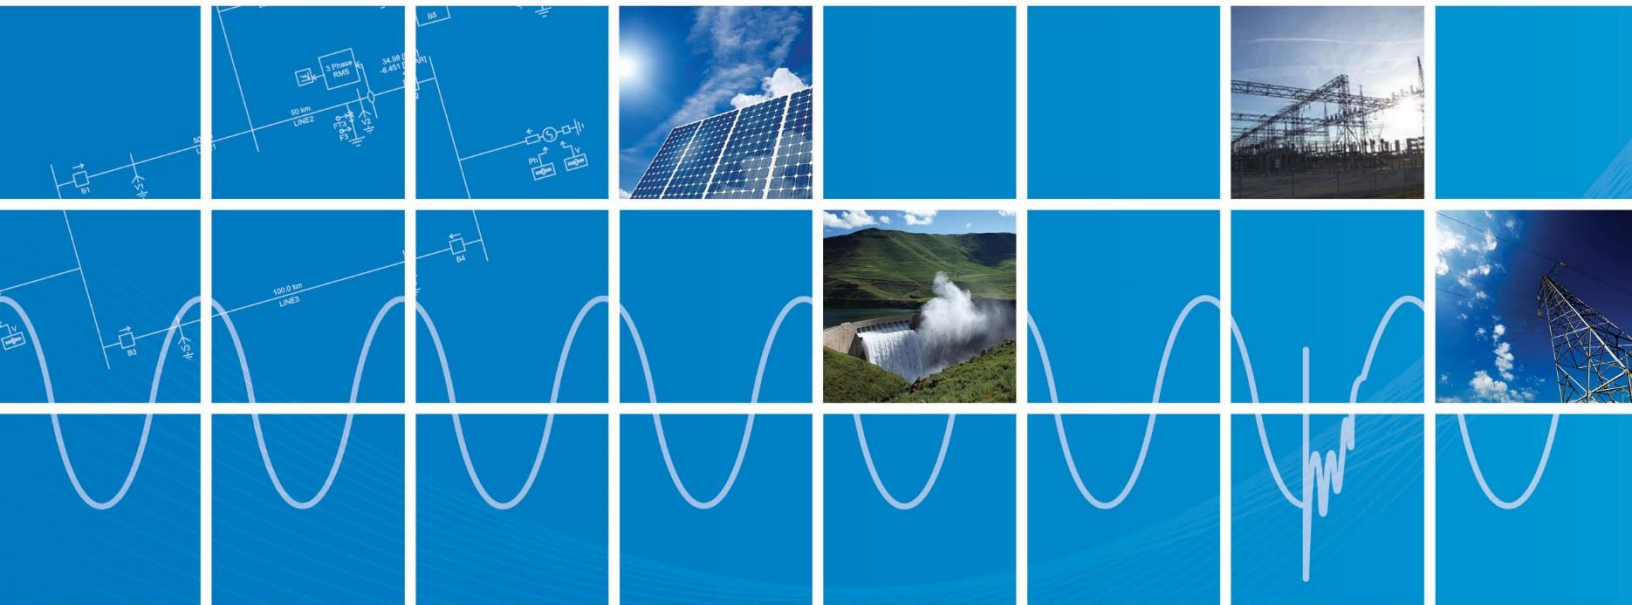

Contents

1. GENERAL.....	1
1.1 INTRODUCTION	1
1.2 ENERPLOT	1
1.3 LICENSING	2
1.4 QUICK START INSTRUCTIONS.....	2
1.5 HOW TO USE THIS MANUAL	2
2. SOFTWARE AND LICENSING SETUP	3
2.1 REQUIREMENTS.....	3
2.2 OBTAIN ACCESS TO ENERPLOT	4
2.3 REGISTER A MYCENTRE USER ACCOUNT	4
2.4 LOG IN TO MYCENTRE	6
2.5 CHANGE YOUR MYCENTRE PASSWORD	7
2.6 JOIN A WORKGROUP USING A JOIN CODE	8
2.7 INSTALL THE SOFTWARE	10
2.7.1 <i>Considerations</i>	10
2.7.2 <i>Normal Installation - Installer Utility</i>	10
2.7.3 <i>Silent Installation – Windows Command Prompt</i>	13
2.7.3.1 Background.....	13
2.7.3.2 Basic Workflow.....	13
2.7.3.3 Background on Pre- and Post- actions.....	13
2.7.3.4 Command Line Switches.....	14
2.7.3.5 Common Return Codes	15
2.7.3.6 Addressing Errors	16
2.7.3.7 Enerplot Installation Notes.....	16
2.7.3.8 Typical Enerplot Silent Install Commands	16
2.7.3.9 Notes About Elevation.....	17
2.8 LAUNCHING ENERPLOT	18
2.9 ACTIVATING A CERTIFICATE.....	19
2.10 RETURNING THE CERTIFICATE.....	21
2.10.1 <i>Manually Return the Certificate</i>	21
2.10.2 <i>Automatically Return the Certificate</i>	21
2.11 CONFIGURING ENERPLOT TO RETAIN OR RETURN A CERTIFICATE	22
2.12 SHARING A CERTIFICATE WITH MULTIPLE USERS	24
2.13 REMOVING ENERPLOT	25
2.14 VIEWING YOUR MYCENTRE WORKGROUP PRODUCTS	27
2.15 VIEWING AND UPDATING YOUR PROFILE	29
3. RESOLVING ISSUES.....	30
3.1 SOFTWARE INSTALLATION ISSUES.....	31
3.2 MYCENTRE LOGIN ISSUES	32
3.2.1 <i>General Login Tips</i>	32
3.2.2 <i>Resetting your Password</i>	33
3.2.3 <i>Blocked E-mails</i>	35
3.3 CERTIFICATE LICENSING ISSUES.....	36
3.4 DETERMINING YOUR ENERPLOT LICENSE NUMBER	37
3.5 CONTACT THE SUPPORT DESK	38
APPENDIX A: RESOURCES FOR NEW USERS.....	39

1. General

1.1 Introduction

This manual provides instructions for installing Enerplot and activating a license.

Also included are the steps for registering a MyCentre user account, which is required for obtaining access to the software and licensing.

For any login, installation, join code, or licensing issues, a section on obtaining assistance is included.

1.2 Enerplot

Enerplot is an automatable software tool for displaying and analysing simulated and measured data, in an offline environment.

Supported files:

- PSCAD files:
 - EMTDC output (*.inf, *infx, *.out)
 - PSCAD Harmonic Frequency Scanner Output File
- COMTRADE files (*.cfg) – 1991, 1999 both ASCII and Binary
- PSS/E (*.out, *.asc)
- RSCAD (*.out)
- Comma Separated Values (*.csv) – Formatted and Unformatted
- Text files (*.txt) – Formatted and Unformatted

All file types, once loaded into Enerplot, can be converted to Comma Separated Value or COMTRADE formats.

Enerplot contains a Python 3 interpreter for the purpose of internal scripting. This interpreter is conveniently embedded in the software itself, but has a fixed unalterable set of site packages. Expanded scripting capabilities are available using an external Python interpreter. With an external interpreter, additional third-party modules may be installed. In addition, debugging tools may be used.

Offline Plotting & Analysis

1.3 Licensing

Certificate licensing, also known as Advanced Licensing or Internet Licensing, is used for running Enerplot. Login credentials in an Internet-based user portal called MyCentre are used to authorize licensing, and a certificate to run Enerplot is checked out onto the computer.

Once a certificate is activated, it may be used to run multiple instances of Enerplot on that machine, the number of instances being limited only by the machine's memory size.

When a certificate is checked out, it may either be retained on that computer when Enerplot is exited, or returned to MyCentre so that another user may check it out. If the certificate is retained, it will initially be valid for a four-week period; this period will then be refreshed to a new four-week period whenever Enerplot is re-launched with Internet access. The benefit to retaining a certificate on a machine is that Enerplot may be run for up to four weeks without requiring Internet access, making it portable.

If the certificate is returned, it is available to be activated to the same or different authorized user.

The license for the certificate is held within MyCentre in a special grouping called a "workgroup". A workgroup contains products, such as certificate licensing, and authorized users, who are called "members".

When licensing will be shared among many users within one workgroup, access to a workgroup may be controlled by a designated person (or people) within the organization. The designated person is referred to as the "WorkGroup Administrator", "Local Administrator" or simply "Administrator". In addition to adding and removing member access to the workgroup, the workgroup administrator may also designate other members as additional administrators. For further details on managing a workgroup please refer to this [article](#).

This manual provides all required instructions for a member to register a MyCentre user account, join a workgroup, and set up the software and licensing.

1.4 Quick Start Instructions

This manual contains detailed instructions for setting up a member's software. For quick setup instructions, refer instead to the document "Quick Start Setup – Enerplot", which may be downloaded from this [article](#).

1.5 How to Use this Manual

Section 2 contains instructions for setting up your software, which include registering a MyCentre user account, joining a workgroup to access the products, and installing and licensing the software.

If you encounter any issues during this setup, assistance may be requested through our support desk as per Section 3.

Appendix A lists the resources for becoming familiar with Enerplot.

2. Software and Licensing Setup

This section provides all required steps for setting up software and certificate licensing, and should be performed in the order presented.

2.1 Requirements

The requirements for installing, licensing, and using Enerplot are listed in this [article](#).

2.2 Obtain Access to Enerplot

Enerplot is available as either permanently licensed or for a time-limited trial.

The software may be purchased through our sales desk (enerplotsales@mhi.ca). Or, if your organization already owns Enerplot licensing, please request access from your WorkGroup Administrator. You will be provided a join code, that will be used to join your MyCentre user account to the workgroup containing the software and licensing. Proceed to Section 2.6 to use the join code.

Note

To find out who the workgroup administrator is, send a request to our sales desk (enerplotsales@mhi.ca), ensuring to include your name and organization.

For a trial, please contact our sales desk (enerplotsales@mhi.ca). Ensure to include your name and the name of your organization.

2.3 Register a MyCentre User Account

A MyCentre user account is required to authorize certificate licensing. If you do not already have a MyCentre user account, proceed as follows to register one:

- a. Open a web browser to the following link:

<https://mycentre.hvdc.ca/register>

Note

Firefox, Google Chrome or a recent version of Internet Explorer are recommended.

- b. Proceed through the registration process when prompted.

Note


If the “Next” button does not work during the registration, switch to a different browser.

- c. When the following dialog box displays, place a checkmark in the field as shown:



Offline Plotting & Analysis

- d. If the registration process is successful, you will be informed that you have registered a MyCentre user account, and that an e-mail with a temporary password has been sent to you. Select “Return to Home” to continue.

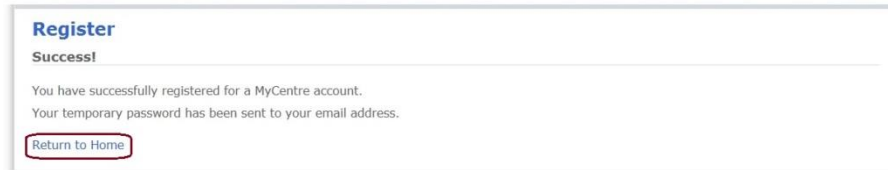

- e. Obtain your temporary password from your e-mail account.

Note

If you have not received an e-mail with the password within a few minutes of finalizing the registration, refer to Section 3.2.3 to troubleshoot the problem.

- f. Proceed to Section 2.4 to log in to MyCentre.

2.4 Log in to MyCentre

Log in to MyCentre as follows:

Requirement

A MyCentre user account (Section 2.3)

- a. Open a web browser, and go to the following link:

<https://mycentre.hvdc.ca/login>

- b. When prompted, enter your MyCentre login credentials, then select “Log in”.


Notes

1. If this is your first time logging in, use the provided temporary password (see Section 2.3).
 2. Refer to Section 3.2 for login tips and troubleshooting.
- c. It is recommended that upon registering in MyCentre, you change the temporary password per Section 2.5.
 - d. If you have been provided a join code to join a workgroup, proceed to Section 2.6 to join a workgroup. Otherwise, proceed to Section 2.7 to install the software.

2.5 Change your MyCentre Password

If a MyCentre user account was newly registered (per Section 2.3), it is recommended that you change the assigned temporary password, as follows:

- a. If not already logged in, log in to MyCentre (Section 2.4).
- b. From the drop-down menu on the right-hand side, select “Change Password”.

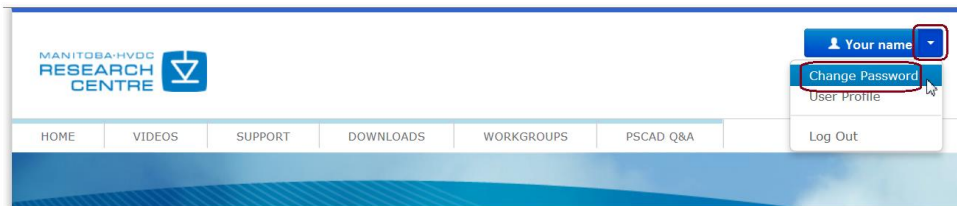

- c. When prompted, enter your current and new passwords, then select “Change Password”.



The screenshot shows the 'Change Password' form. At the top, it says 'Change Password' and 'Or cancel to go to Home.' Below this are three input fields: 'Current' (with 'Current password' placeholder), 'New' (with 'New password' placeholder), and 'Confirm New' (with 'Confirm new password' placeholder). To the right of the 'Current' field is instruction '1. Enter your current password.' To the right of the 'New' and 'Confirm New' fields is instruction '2. Enter your new password twice.' Below the input fields is a link 'Why is password strength important?'. At the bottom left is a blue 'Change Password' button. To the right of the button is instruction '3. Select "Change Password".'

- d. You will be notified that you have changed your account password. Select “Return to Home” to continue.



The screenshot shows the 'Change Password' success message. It says 'Change Password' and 'Success!'. Below this is a message: 'You have successfully changed your password.' At the bottom left is a red-bordered button labeled 'Return to Home'.


2.6 Join a WorkGroup using a Join Code

If you have been provided a join code, use the join code to join the WorkGroup to your MyCentre user account as follows:


Note

Refer to Section 2.2 for more information on when a join code is used.


- If not already done, set up a MyCentre user account (Sections 2.3 to 2.5).
- Log in to MyCentre (Section 2.4).
- Select the “WORKGROUPS” tab.

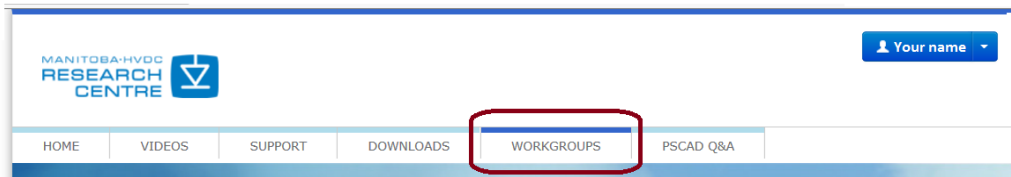

- Select “Use Join Code”.

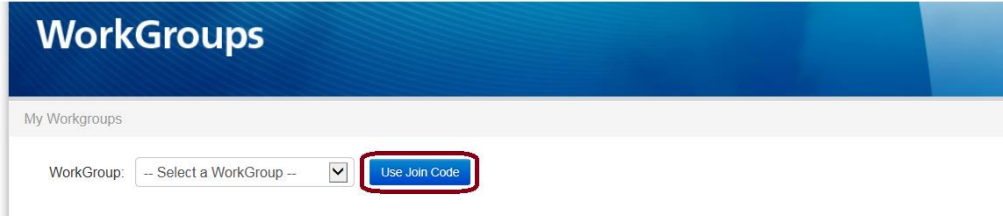

- Enter the join code when prompted, then select “Apply”.

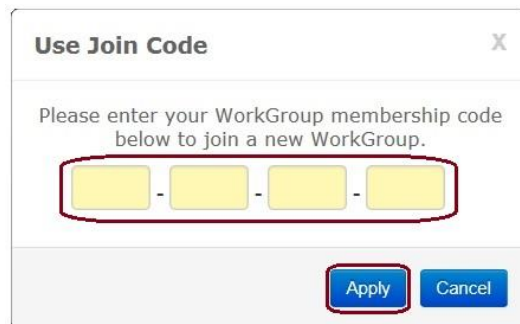

Note

These characters are case sensitive. If you received this code digitally, simply copy and paste them in.

Offline Plotting & Analysis

- f. If the join code was entered correctly, you will be informed that you have successfully joined the workgroup. You will now have access to the licensing within this workgroup. Proceed to Sections 2.7 to 2.9 to set up your software.

Success: You have successfully joined a WorkGroup.

Note

To view the licensing information in a workgroup, refer to Section 2.14.

- g. Or, if the join code was not entered correctly:

- An error message will display.

Error: The code submitted is invalid.

- Re-enter the code. Each of the four fields should contain five characters.
- For any ongoing difficulties, contact our support desk as per Section 3.5, ensuring to include the join code in your e-mail.

2.7 Install the Software

2.7.1 Considerations

The following are some considerations for your installation:

1. **Type of Installation:** The software may be installed in two manners:
 - Normally, using the Installer utility (Section 2.7.2).
 - Silently, through the Windows Command Prompt (Section 2.7.3).
2. **Options:** During the installation, the following products may also be installed (see Section 1.2 for details on these products):
 - **Python:** Install this if you intend to perform external scripting and if Python 3.5 or better is not already installed.
 - **Enerplot Automation Library:** Install this if you intend to perform external scripting and if Python 3.5 or better is installed.

2.7.2 Normal Installation - Installer Utility

Install the software using the Installer utility as follows:

Notes


1. System requirements are listed in Section 2.1, Step 2.
2. If you encounter any installation issues, refer to Section 3.1.
 - a. Review the installation considerations as per Section 2.7.1.
 - b. Obtain access to the software as per Section 2.2.
 - c. Extract (unzip) the top-level zipped file, and save the unzipped folder to your local drive (e.g. desktop).

Warning

Do not unzip any of the zipped sub-files.

Offline Plotting & Analysis

- d. Right-click on the unzipped “Installer.exe” file, and select “Run as administrator”.

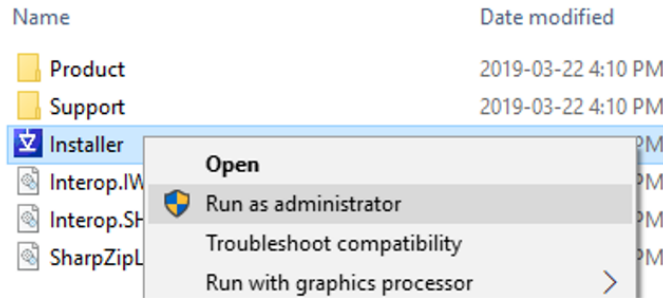


- e. When prompted by the User Account Control dialog box, select the option to run this installation with Windows administrator privileges by selecting “Yes”.
- f. The Installer will launch.


Note

If the Installer has detected that Enerplot is already installed, a message similar to that shown in Step (i) will display. The installation will be complete; simply close the Installer.

- g. When prompted whether to install Python, refer to Section 2.7.1 for further information:

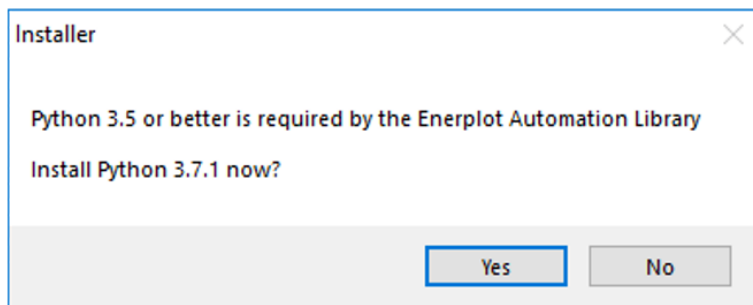


- h. When prompted whether to install the Enerplot Automation Library, refer to Section 2.7.1 for further information.

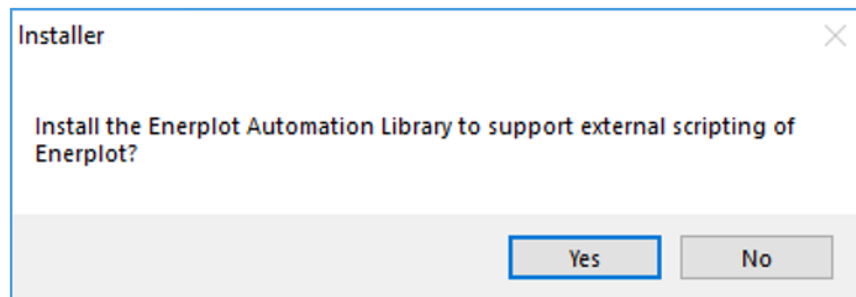

Offline Plotting & Analysis

- i. The software will be installed. When the installation is complete, a message similar to the following will display:

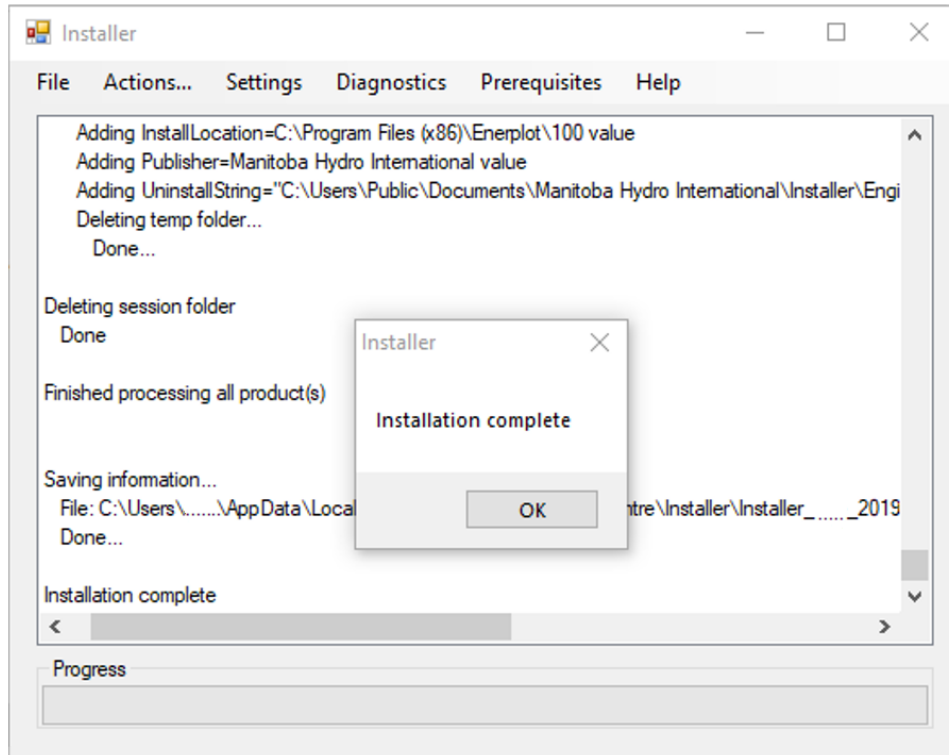

- j. Select "OK" and close the Installer.

Proceed to Section 2.8 to launch your software.

Offline Plotting & Analysis

2.7.3 Silent Installation – Windows Command Prompt

2.7.3.1 Background

The Installer utility supports a silent install configuration in which an automated Software Management System can deploy it to multiple machines without human intervention.

The IT staff managing the SMS-based deployment have several command line switches that they can use to specify the behaviour of the installation.

2.7.3.2 Basic Workflow

1. Ensure that system requirements are met (Section 2.1, Step 2).
2. Review the installation considerations as per Section 2.7.1.
3. Obtain access to the software (Section 2.2).
4. Download the Installer zipped file to the target machine.
5. Extract (unzip) the top-level zipped file, and save the unzipped folder to your local drive (e.g. desktop).

Warning

Do not unzip any of the zipped sub-files.

6. Run the Installer.exe application with the appropriate command line switches (see Section 2.7.3.4 and Section 2.7.3.8).
7. Check the exit code of the application (see Section 2.7.3.5) and perform any further actions.

2.7.3.3 Background on Pre- and Post- actions

A product installation manifest may specify:

- A pre-installation action that must be performed before the product installation can begin. A typical example is stopping a specified service. Not all products require a pre-installation action.
- A post-installation action that must be performed after the product has been installed. A typical example is starting a specified service. Not all products require a post-installation action.
- A post-module installation action that must be performed after the module has been installed. A typical example is running a batch file, or running a third party installer. Not all modules specify a post-install action.

Offline Plotting & Analysis

2.7.3.4 Command Line Switches

Switch	Interpretation
/Silent=false	Normal operation
/Silent=true	Silent operation. All dialogs are silenced.
/Folder=	If not specified (the default), the Installer utility will look for a ZIP file in the \Products folder relative to the Installer.exe file. If specified, this is the folder that contains the product ZIP file that is to be installed by the utility.
/ChildInstaller=true	Install the product without logging into MyCentre and without adding it to the MyUpdater products list.
/Elevated=true	Run the Installer utility with elevated privileges, required to install files to Program Files, create machine shortcuts, modify the system environment, and run third party installers.
/Execute=	If this switch is not specified at all, then all specified module post-install actions are executed.
/Execute=NONE /Execute=none	No specified module post-install actions are executed at all.
/Execute=module1	Only module1's post-install actions are executed (if it has any). All other modules' post-install actions are ignored.
/Execute=module1,module2	Only module1's and module2's post-install actions are executed (if they have any). All other modules' post-install actions are ignored. Multiple modules should be comma-separated.
/Exit=true	When done, the user can review the installation messages. The user must explicitly close the application.
/Exit=false	When done, the application closes immediately, and returns the exit code to the system.

Offline Plotting & Analysis

2.7.3.5 Common Return Codes

Return code	Interpretation
0	Success.
32500	A pre-installation sanity check failed.
32501	A required login to a valid MyCentre account failed.
32502	The product's pre-install action failed to execute correct.
32503	The product's post-install action failed to execute.
32504	A module's post-install action failed to execute.
32505	Installation folder not specified or is invalid.
32506	General installation failure. Usually due to not launching the Installer.exe with elevated privileges.

Other return codes are also possible...

A product installation manifest may specify:

- A pre-installation action which must be performed before the product installation can begin. A typical example is stopping a specified service. Not all products require a pre-installation action.
- A post-installation action which must be performed after the product has been installed. A typical example is starting a specified service. Not all products require a post-installation action.
- A post-module installation action which must be performed after the module has been installed. A typical example is running a batch file, or running a 3rd party installer. Not all modules specify a post-install action.

Offline Plotting & Analysis

2.7.3.6 Addressing Errors

If you do encounter an error mode when using Silent installer mode, you can do the following to see what is generating that reported error:

- a. Copy the Installer ZIP to the target machine.
- b. Extract the Installer ZIP once.
- c. Run the Installer.exe application with the appropriate command line switches, but leave out /Exit=true.
- d. Scroll through the messages to see the offending error messages.
- e. Resolve any errors, then try again.

2.7.3.7 Enerplot Installation Notes

Note that Enerplot has two modules that have post-install actions (see Section 2.7.1 for details):

Module name code	Post-install action	Notes
Installs_Python	Run the Python 3.7.1 installer in silent mode	Python 3.5 or better is required to support the external Python scripting of Enerplot. Note that this third party installer can take 60 to 120 seconds to run and complete.
Installers	Installs the Enerplot Automation Library	

2.7.3.8 Typical Enerplot Silent Install Commands

- To just install Enerplot, and to not install Python 3.7.1:

```
Installer.exe /Silent=true /Elevated=true /Login=false /Execute=NONE /Exit=true
```

- If Python 3.5 or better is already installed, and you want to support external Python scripting of Enerplot (install Enerplot and Enerplot Automation Library):

```
Installer.exe /Silent=true /Elevated=true /Login=false /Execute=Installers /Exit=true
```

- If you want to install Enerplot, Python, and the Enerplot Automation Library:

```
Installer.exe /Silent=true /Elevated=true /Login=false /Exit=true
```

Offline Plotting & Analysis

2.7.3.9 Notes About Elevation

If you use the `/Elevated=true` switch then you must also do one of the following:

- Run the batch file or the SMS invoker with elevated privileges, or
- Mark the extracted and saved `Installer.exe` as “Run this program as an Administrator” so that the executable is always launched with elevated privileges.

2.8 Launching Enerplot

Once Enerplot has been installed (Section 2.7), it may be launched from the new desktop shortcut:




Proceed to Section 2.9 to activate a certificate.

2.9 Activating a Certificate

Activate a certificate as follows:

Notes

1. Refer to Section 2.1, Step 3 for requirements.
2. If there are any issues when activating a certificate, refer to Section 3.3.
 - a. If not already running, launch Enerplot as per Section 2.8.
 - b. If not already logged in on Enerplot, select "Log In", and enter your MyCentre login credentials:

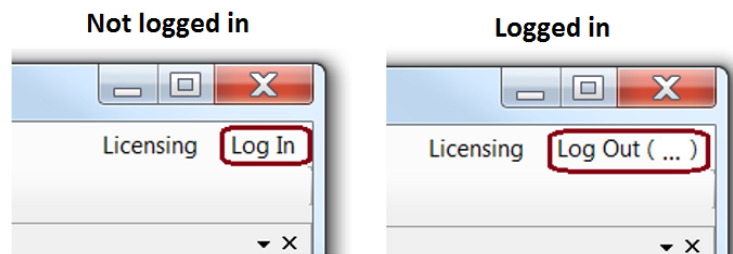


Note


Refer to Section 3.2 for login tips and troubleshooting.

Offline Plotting & Analysis

c. If Enerplot is unlicensed (see below), activate licensing:

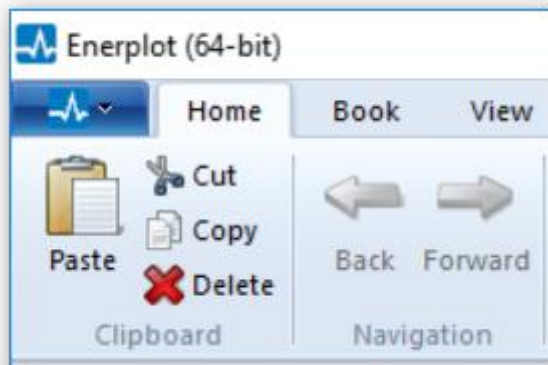


Enerplot is Licensed

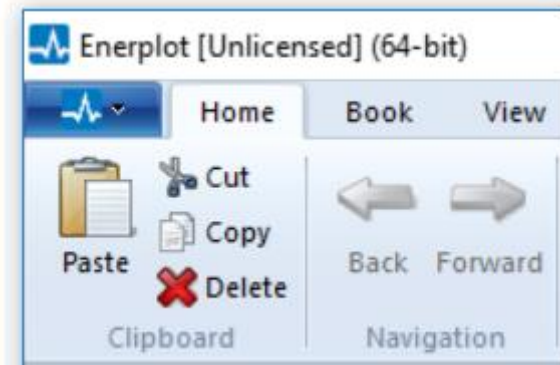

Enerplot is Unlicensed

- Select Licensing | Acquire license.

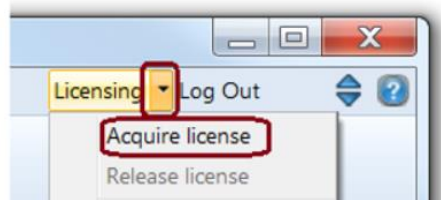

d. A temporary certificate will be activated, and the software will be available to use. See Section 1.3 for details on certificate licensing.

Note

Once a certificate is activated, it may be used to run multiple instances of Enerplot on that machine, the number of which is limited only by the machine's memory size.

e. Configure licensing behaviour upon exit as per Section 2.11.

WARNING

If you are sharing licensing with other users, it is strongly recommended that you configure Enerplot for appropriate exiting behaviour as per Section 2.12.

f. For new Enerplot users, refer to Appendix A for accessing the help files.


2.10 Returning the Certificate

A certificate may be returned either manually or automatically to MyCentre so that it is available to be activated on another machine.

2.10.1 Manually Return the Certificate

Return the certificate manually as follows:

- a. Select Licensing | Release license:

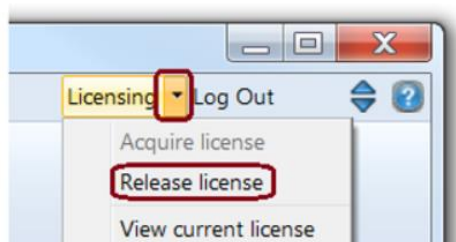

- b. The certificate will be returned to MyCentre.

2.10.2 Automatically Return the Certificate

Set the certificate to be returned automatically whenever Enerplot is closed as per Section 2.12.

2.11 Configuring Enerplot to Retain or Return a Certificate


This section provides instructions for configuring Enerplot to either retain or return a certificate automatically, whenever the application is exited. This will ensure that the certificate will be available to yourself or another user as applicable.

There are three considerations for the next software launch:

- If the next launch will be on this same machine, and you will not be working offline, the certificate may either be retained or returned.
- Or, if the next launch will be on this same machine, but you will be working offline, the certificate should be retained.
- Or, if the next launch will be on a different machine (e.g. other user), the certificate should be returned so that it will be available for activation on the other machine.


Configure the certificate behaviour upon exit as follows:

- a. Select Licensing | Behaviour settings.

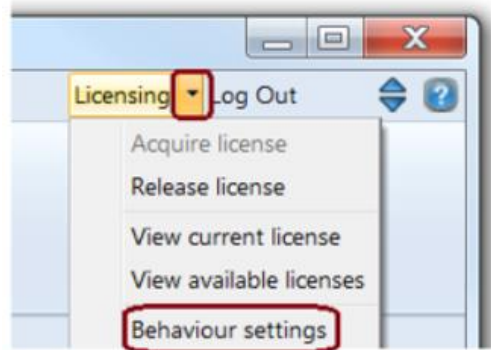


Offline Plotting & Analysis

- b. From the “Behaviour Settings” drop-down menu, select the appropriate exiting behaviour, then select “Ok”:

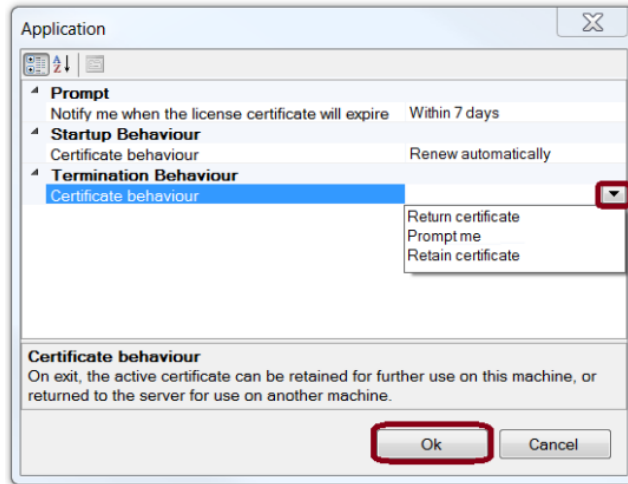

- c. Enerplot will now perform the selected certificate behaviour whenever the application is exited:

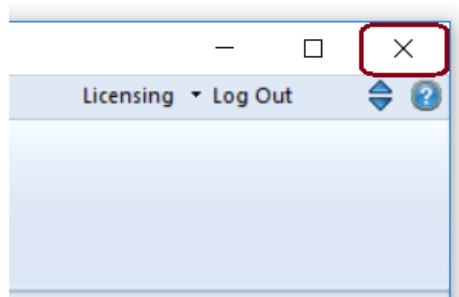

2.12 Sharing a Certificate with Multiple Users

This section provides an important configuration when multiple users will be accessing a certificate.

A certificate may be activated (checked out) on one computer to run one or more instances of Enerplot. When Enerplot is closed, the certificate should be configured to be returned to the license server, to make it available for activation on another user's machine.

If the certificate is not returned to the license server, it will remain checked out on this user's machine, and will not be available to any other users until it is returned.

To avoid locking a certificate on a particular machine, Enerplot should be configured to always return the certificate to the license server whenever the application is closed as per Section 2.11 with the following note:


- At Step (b), select "Return certificate".

Offline Plotting & Analysis


2.13 Removing Enerplot

Enerplot may be removed using the Installer utility as follows:

- a. Ensure all instances of Enerplot are closed.
- b. In Windows Control Panel | Programs and Features, right-click on the Enerplot application, and select the option to uninstall the software:

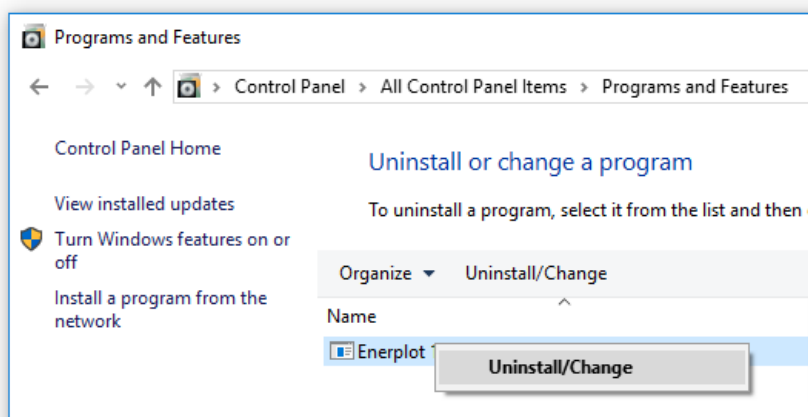


- c. The Installer utility will launch.
- d. Select "Yes":

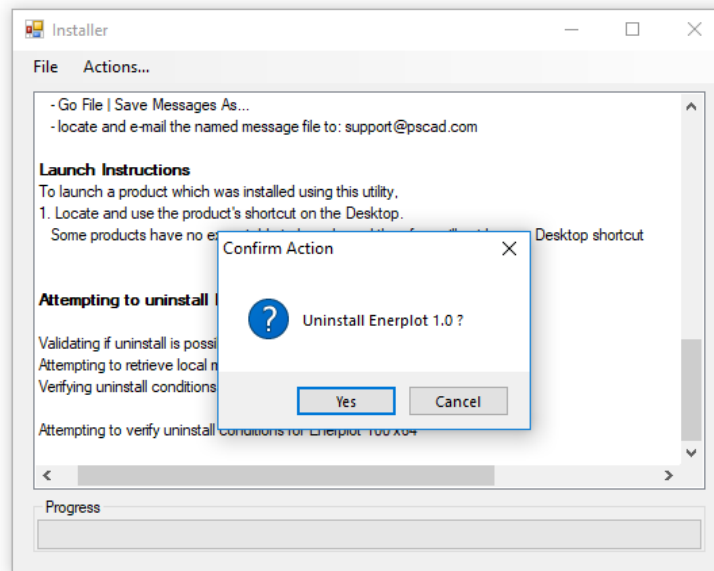


Offline Plotting & Analysis

e. Select “Yes”:

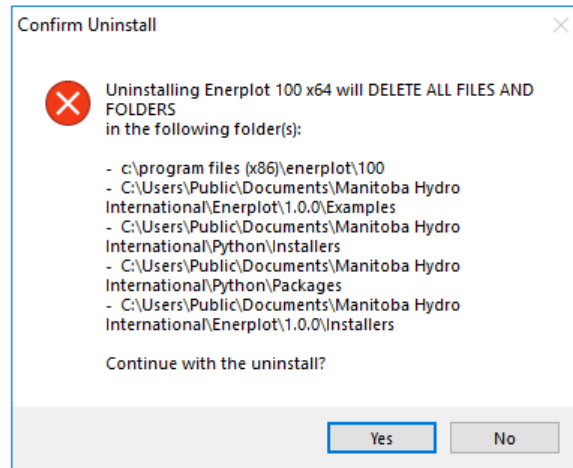


f. If the following error displays, this is because an instance of Enerplot is still open:

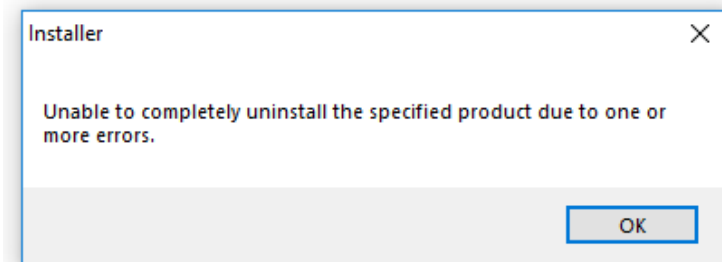

If so:

- Select “OK” and close the Installer.
- Close all instances of Enerplot.
- Restart from Step (b) above.

g. Select “OK” and close the Installer utility.

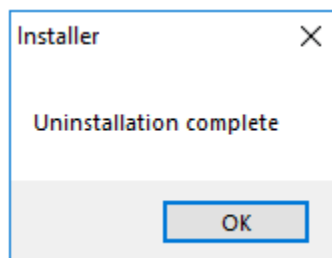


2.14 Viewing your MyCentre WorkGroup Products

This section provides instructions for viewing the products contained in your workgroup. Proceed as follows:

Requirement

You have joined a workgroup (see Section 2.2).


- a. Log in to MyCentre (Section 2.4).
- b. Select the “WORKGROUPS” tab.

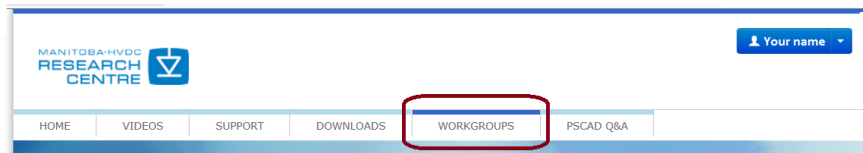

- c. Select the appropriate workgroup from the drop-down menu. Your workgroup will have been assigned a name or number, as provided by the workgroup administrator.


 


- d. The total number of licenses and the number of licenses currently checked out will be listed. To view more information about these licenses, select “See More”.

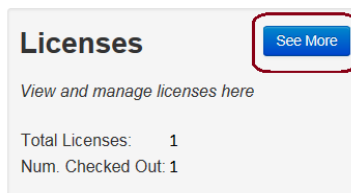

Offline Plotting & Analysis

e. All licenses will be displayed in table format, with the following information:

1. ID 	2.  3. Name	4. Expiration	5. Product	6. Feature Set	7. Checked Out To	8. Checked Out Expires
1	Enerplot 1.0		Enerplot	None	Name	04/18/2019 03:48:48 PM
2	Enerplot 1.0		Enerplot	None		

1. This column displays the license’s unique identification number.
2. This toggle sorts the license identification numbers in ascending or descending order.
3. This column may display some description about the organization and type of license.
4. This column displays the license expiration date. In the above example, both of the licenses are permanent, and therefore there is no expiration date shown. If these licenses were temporary, for example a trial or a lease, an expiration date would be shown.
5. This column displays the product type.
6. This column displays whether any additional features were included with the product.
7. If a certificate is currently checked out, this column will list the member’s name or username, to help manage the license.
8. If the license is currently checked out as a certificate to one of the members, this column displays when the certificate’s checkout expires (local time). For more information on a checkout, refer to Section 1.3.


2.15 Viewing and Updating your Profile

This section provides instructions for viewing and updating your profile for your MyCentre user account. Proceed as follows:

Requirement

You have registered a MyCentre user account as per Section 2.3.

- a. Log in to MyCentre (Section 2.4).
- b. Display “User Profile”.

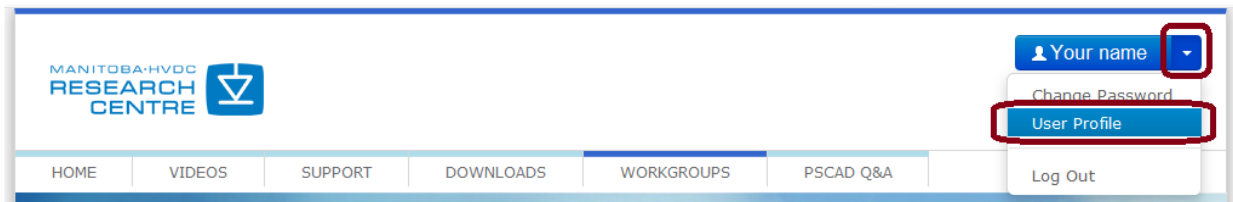

- c. Select the “Edit” button to edit the fields as required.

Note

The username may not be edited.


3. Resolving Issues

Refer to the following sections if you encounter any issues:

- See Section 3.1 for software installation issues
- See Section 3.2 for MyCentre login issues
- See Section 3.3 for licensing issues
- See Section 3.4 to determine your Enerplot license number
- See Section 3.5 to contact our support desk

3.1 Software Installation Issues

If any error messages display while using the Installer, please send in a support request to our support desk for assistance (from the "File" menu, select "Save Messages As", and send in the log file along with a detailed description of the issue to support@mhi.ca).

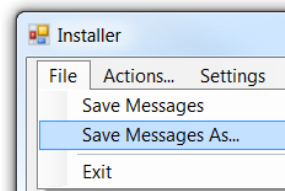

3.2 MyCentre Login Issues

This section provides assistance when any MyCentre login issues are encountered, for example logging in to the MyCentre website, logging in to MyUpdater, and logging in on Enerplot:

- See Section 3.2.1 for general login tips.
- See Section 3.2.2 if a password is forgotten.
- See Section 3.2.3 if a temporary password is not received.

3.2.1 General Login Tips


The following are general MyCentre login tips:

- In the “Username” field, you may enter either the username (case sensitive) or e-mail address associated with your MyCentre user account.
- In the “Password” field, enter the password (case sensitive) associated with your MyCentre user account.

Note

Ensure that you are not entering your Windows or network login password.

- If incorrect login credentials were entered in the previous step, an error message will display. Select “OK”, and you will be prompted to retry entering your MyCentre login credentials.

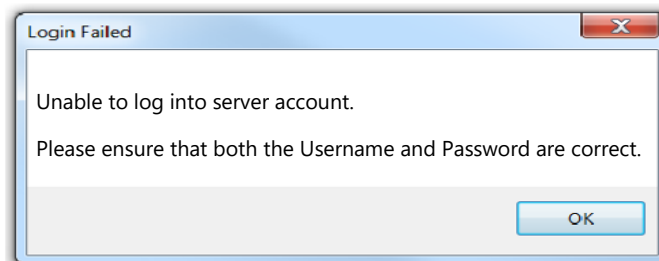

Warning

Too many incorrect login attempts will cause your MyCentre user account to be locked for a period of time.

- If you have forgotten your password, it may be reset as per Section 3.2.2.
- If you have not received the automatically-generated e-mail containing the password information following MyCentre registration or password reset, see Section 3.2.3.
- For any ongoing login issues, please contact our support desk as per Section 3.5. Include your MyCentre username and e-mail address, as well as screenshots of any error messages.

Offline Plotting & Analysis

3.2.2 Resetting your Password

If you have forgotten your password, it may be reset as follows:

- a. Go to the “Log In” page:


<https://mycentre.hvdc.ca/login>

- b. Fill in the page as shown:



The screenshot shows the 'Log In' page. At the top, it says 'Log In' and 'Or Register a new account.' Below this are two input fields: 'Username' with the placeholder text 'username or email address' and 'Password' with the placeholder text 'password'. To the right of the Username field, there is a callout '1. Enter your username or e-mail address'. Below the input fields is a checkbox labeled 'Keep me logged in'. At the bottom left is a blue 'Log in' button. To its right is a link 'Forgot Password?'. A callout '2. Select "Forgot Password?"' points to this link.

- c. You will be notified that your password has been reset, and that a reset link has been e-mailed to you.

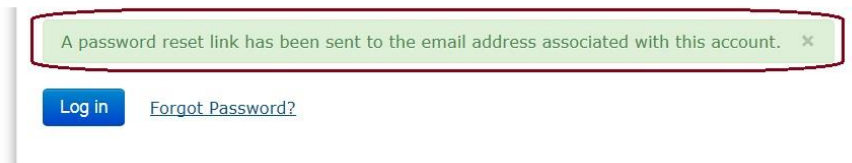


The screenshot shows a green success message box with a close button (X) on the right. The message reads: 'A password reset link has been sent to the email address associated with this account.' Below the message box are two buttons: a blue 'Log in' button and a 'Forgot Password?' link.

Note

If you have not received an e-mail with a temporary password within a few minutes, refer to Section 3.2.3.

Offline Plotting & Analysis


- d. In the generated e-mail, follow the link provided to display the login reset webpage. The two methods for displaying this webpage are shown in the following screenshot:

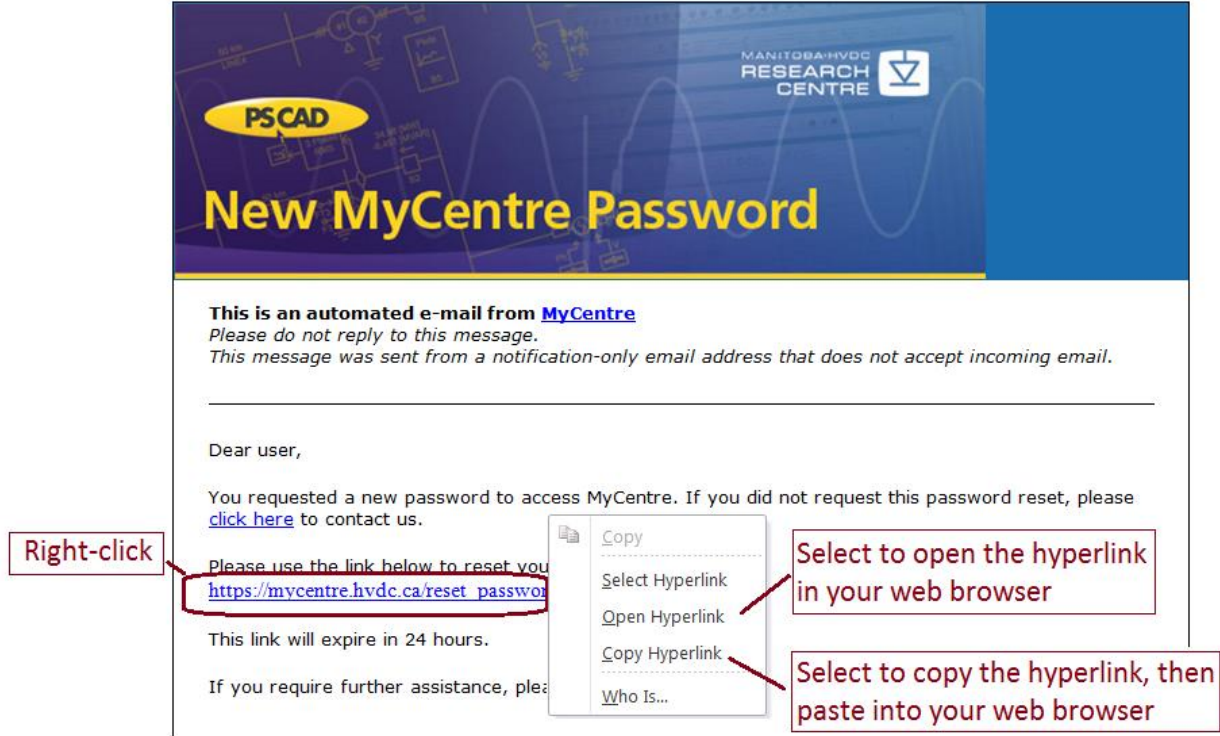

- e. When prompted, reset your password as shown:



- f. If the password reset was successful, you will be notified as shown. Selecting “Return to Home” will log you in to MyCentre and display the “Home” page.

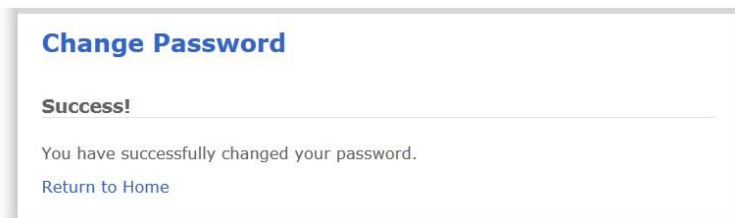

3.2.3 Blocked E-mails

When registering a new MyCentre user account (Section 2.3) or resetting your password (Section 3.2.2), you should receive an automatically generated e-mail with password information shortly after submitting the request (usually within a few minutes).

If you did not receive this e-mail, the following may be considered:

- The auto-generated e-mail may be filed in your “Junk” e-mail folder.
- For a password reset, if you enter an incorrect username/e-mail address in the “Username” field, the auto-generated e-mail will not be sent to you.
- If your organization is blocking auto-generated e-mails, the MyCentre e-mail would likely be blocked. Have your IT staff set their server to not block e-mails from mycentre@hvdc.ca, then reset your password per Section 3.2.2.

Or, if your IT staff may not unblock these e-mails, register a new MyCentre user account using a different e-mail address on a different network (e.g. home). Once you have received your temporary password over this other network, you may use it to log in to MyCentre on either network.

3.3 Certificate Licensing Issues


If you encounter any issues with activating a certificate (Section 2.8), please forward your Enerplot.txt file to our support desk to determine the reason.

This log file may be found in the following location:

C:\Users\Public\Documents\Manitoba Hydro International\Licensing\Logs

Note


This log file may also be displayed easily from within the Enerplot application by selecting Licensing | View log.

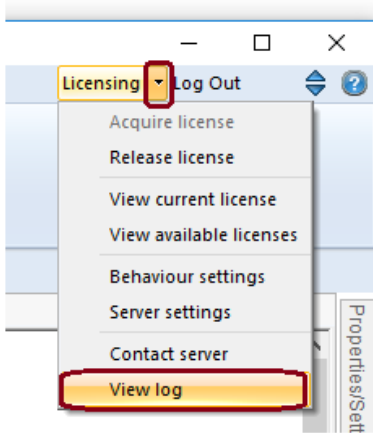


3.4 Determining your Enerplot License Number

When requesting support from our support desk, your license certificate number is required. This may be determined as follows:

- a. Launch Enerplot (Section 2.8), and activate a certificate (Section 2.9).
- b. Select Licensing | View current license:

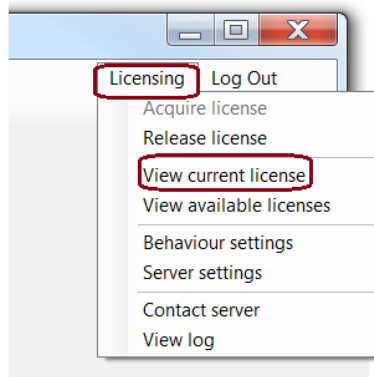

- c. The certificate number (ID) and WorkGroup name will be displayed:

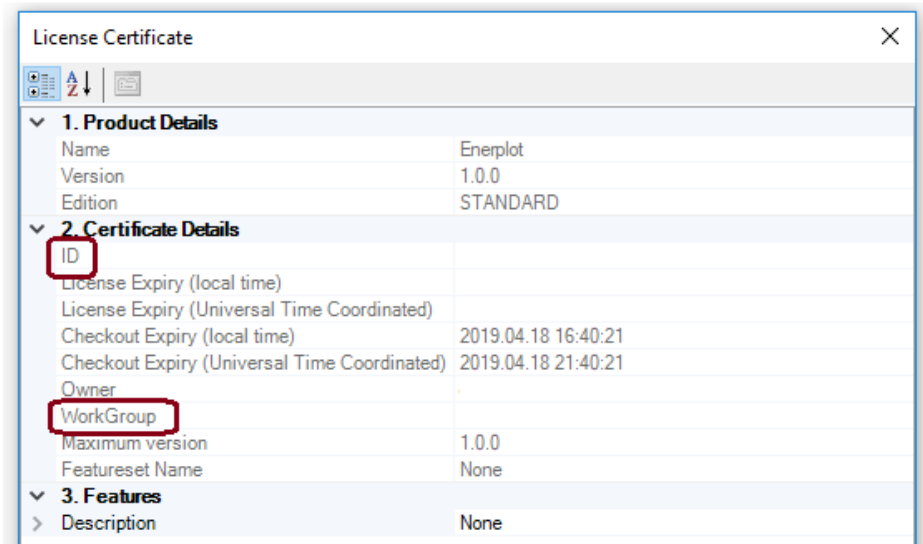

3.5 Contact the Support Desk

If you are unable to resolve an installation, login, join code, or licensing issue, please submit a support request to our support desk.

Send an e-mail to support@mhi.ca, ensuring to include all relevant information to expedite assistance, including:

- The name of your organization
- If known, your license number, which may be determined as per Section 3.4
- A detailed description of the issue
- For a licensing issue, include your licensing log file as per Section 3.3
- Screenshots of any error messages

Appendix A: Resources for New Users

A Help manual is available to assist new users to become familiar with Enerplot:





Offline Plotting & Analysis

DOCUMENT TRACKING

Rev.	Description	Date
0	Initial	01/Apr/2019
1	Update to Section 3.2.1	22/Nov/2019
2	Update to Section 2.1	07/Dec/2020